


**INDUSTRY FLYER**

**TMI-Orion**

**FOOD  
PROCESSING**

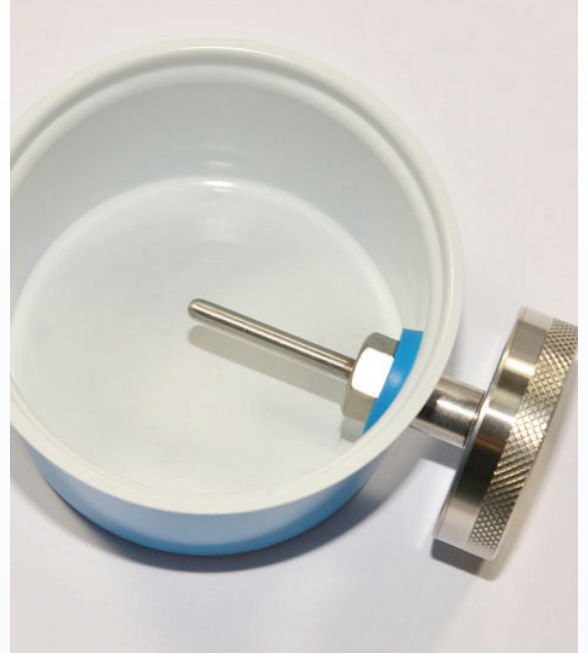

**HIGH TECH DATA LOGGING SOLUTIONS**



[www.tmi-orion.com](http://www.tmi-orion.com)

# TMI-Orion

## Food Processing



**TMI-Orion presents a full range of high tech data loggers designed for the food processing industry, measuring temperature, pressure, air flow, rotation, deformation during the thermal cycles.**

**TMI-Orion data loggers work with a dedicated software allowing visualization and data management.**

**TMI-Orion offers a high tech range of solutions for food processing applications that combines performance, reliability and lasting quality.**

---


## THE COMPANY

---

TMI-Orion has been a world leader in the design and manufacture of high level solutions for measurement, validation, quality control and process control in harsh environments since 1994.


TMI-Orion offers a wide range of real time and wireless 2.4 GHz data loggers, and a software platform for the management and visualization of process data. Thanks to

its 20-year strategy of scientific research and industrial development, the company is able to create sophisticated solutions to meet technological challenges and to answer the needs of its customers' demanding applications. Thanks to a high level of adaptability, TMI-Orion can also design customized solutions, in close cooperation with customers.

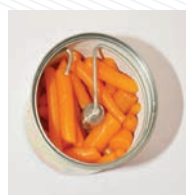

## PROCESSES OF THE FOOD INDUSTRY

Validation of thermal processes in the food industry is related to both sanitary requirements and creating quality products in terms of taste and texture. This involves the validation of sterilization and pasteurization cycles as well as the control of different industry specific manufacturing processes.

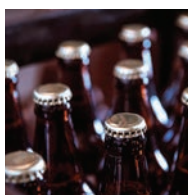

## STERILIZATION

Sterilization is performed in static or rotary retorts.

The following processes are required for sterilization validation:


- Thermal cycle validation (F0)
- Heat distribution test to find the cold spot in the chamber
- Heat penetration test to find the cold spot in the container

Other data can be measured during the thermal processes such as:

- Deformation of containers during the sterilization cycles
- Difference of pressure inside and outside a container
- Rotation speed of the cans in continuous rotary sterilizers

## Sterilization validation / cooking control

Static or rotary retorts are suitable for simultaneous sterilization and cooking of many kinds of products in containers like jars, cans, pouches, doypacks, trays, bottles... Temperature and pressure measurement are carried out inside retorts and inside the food containers.

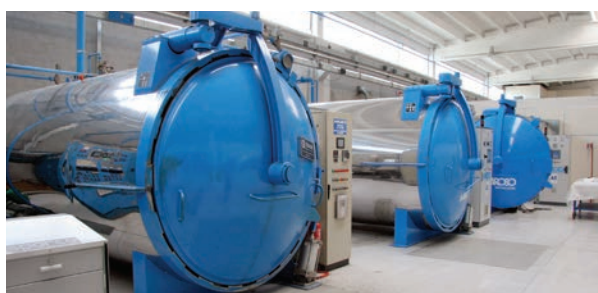

### TMI-Orion solutions

- **Data loggers**  
PicoVACQ Temperature or NanoVACQ Temperature
- **Software**  
Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
+ Calibration module: optional  
**OR**  
Qlever Lite
- **Connectivity**  
2.4 GHz radio modem or wired interface for NanoVACQ  
Wired interface for PicoVACQ



## Packaging deformation

On cans and flexible containers, it is important to prevent defects that may occur during thermal treatments: mainly bursting and deformation.

In order to determine the counter-pressure to apply, it is possible to measure internal and external temperature at all times.

It is also possible to measure directly the container deformation with an inductive movement sensor.



### TMI-Orion solutions

#### A) Inductive movement sensor

- **Data loggers**  
NanoVACQ Deformation + positioning kit.
- **Software**  
Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
**OR**  
Qlever Lite
- **Connectivity**  
Wired interface

#### B) Counter-pressure

- **Data loggers**  
NanoVACQ PT-Tc or PicoVACQ PT
- **Software**  
Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
+ Calibration module: optional  
**OR**  
Qlever Lite
- **Connectivity**  
2.4 GHz radio modem or wired interface for NanoVACQ PT-Tc

## Rotation speed measurement

Measurement of the rotation speed of cans inside continuous rotary sterilizers is necessary to validate the sterilization process.

TMI-Orion offers a solution to measure speed rotation inside any rotating process, such as retorts, from -40°C to +140°C, up to 150 rpm.



### TMI-Orion solutions

- **Data loggers**  
PicoVACQ Rotation
- **Software**  
Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
**OR**  
Qlever Lite
- **Connectivity**  
Wired interface

---

## PASTEURIZATION

Heat treatments in pasteurization processes are usually carried out in tunnel pasteurizers, where the bottles, jars or cans are conveyed under hot water sprays. The water temperature increases up to the pasteurization temperature point and then cools down so that the containers themselves are cooled at the end of the conveyor belt for unload.

### Pasteurization validation

---

TMI-Orion offers solutions for pressure and temperature measurement and PU calculation.



#### TMI-Orion solutions

- **Data loggers**  
PicoVACQ Temperature or NanoVACQ Temperature or MiniVACQ

### Microwave processes

---

When microwave oven processes are used, temperature is controlled with a rugged watertight logger protected by a thermal shield directly inserted in the product, or immersed into a liquid.

#### TMI-Orion solutions

- **Data loggers**  
Picoμwave

The validation process includes the following steps:

- Heat distribution test to find the cold point in the tunnel
- Heat penetration test to find the cold spot in the product

- **Software**

Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
+ Calibration module: optional

**OR**

Qlever Lite

- **Connectivity**

2.4 GHz radio modem or wired interface for NanoVACQ  
Wired interface for PicoVACQ and MiniVACQ

- **Software**

Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
+ Calibration module: optional

**OR**

Qlever Lite

- **Connectivity**

Wired interface

---

## OTHER INDUSTRIAL PROCESSES

### Bakery cooking

---

For specific applications of bakery or pastry cooking in tunnel ovens, temperature can be monitored at various points in the oven and inside the product.

Above +140°C, the loggers must be protected by a thermal shield.



#### TMI-Orion solutions

- **Data loggers**

PicoVACQ Temperature or NanoVACQ Temperature or VACQ xFlat

- **Software**

Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
+ Calibration module: optional

**OR**

Qlever Lite

- **Connectivity**

2.4 GHz radio modem or wired interface for NanoVACQ and VACQ xFlat  
Wired interface for PicoVACQ



## Roasting

For nut roasting processes, TMI-Orion recommends the use of small thermocouple data loggers.

Above +140°C, the loggers must be protected by a thermal shield.



### TMI-Orion solutions

- **Data loggers**  
PicoVACQ 1TH or NanoVACQ TH or PicoVACQ Temperature
- **Software**  
Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
+ Calibration module: optional  
**OR**  
Qlever Lite
- **Connectivity**  
2.4 GHz radio modem or wired interface for NanoVACQ 1TH and NanoVACQ 2TH  
Wired interface for PicoVACQ and NanoVACQ 3TH

## Drying

Monitoring food drying and fermentation processes requires temperature and humidity measurement during the cycles. Measuring air flow in the dryers is also required to ensure the evenness of the air distribution during the cycles.



### TMI-Orion solutions

- **Data loggers**  
PicoVACQ Temperature or NanoVACQ Temperature or VACQ xFlat  
PicoVACQ HT or NanoVACQ HT  
NanoVACQ Ad-Td
- **Software**  
Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
+ Calibration module: optional  
**OR**  
Qlever Lite
- **Connectivity**  
2.4 GHz radio modem or wired interface for NanoVACQ and VACQ xFlat  
Wired interface for PicoVACQ

## Freezing

For freezing processes, TMI-Orion offers solutions based on loggers measuring temperature down to -90°C without thermal shields.



### TMI-Orion solutions

- **Data loggers**  
NanoVACQ Temperature or PicoVACQ Temperature
- **Software**  
Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
+ Calibration module: optional  
**OR**  
Qlever Lite
- **Connectivity**  
2.4 GHz radio modem or wired interface for NanoVACQ  
Wired interface for PicoVACQ

## Smokehouse applications

Smoking is a process used in the food industry to add flavor and color to fish, meat, or cheese. Inside the smokehouse, the products are placed on hangers or screens, the air circulates at the conditions of temperature, humidity and air flow required by the process.



### TMI-Orion solutions

- **Data loggers**  
PicoVACQ Temperature or NanoVACQ Temperature or VACQ xFlat  
PicoVACQ HT or NanoVACQ HT  
NanoVACQ Ad-Td
- **Software**  
Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
+ Calibration module: optional  
**OR**  
Qlever Lite
- **Connectivity**  
2.4 GHz radio modem or wired interface for NanoVACQ and VACQ xFlat  
Wired interface for PicoVACQ

## Oil cooking

PicoVACQ with specific thermal shield can withstand up to 200°C. It is used to validate temperature in frying processes.



### TMI-Orion solutions

- **Data loggers**  
PicoVACQ Temperature
- **Software**  
Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
+ Calibration module: optional  
**OR**  
Qlever Lite
- **Connectivity**  
Wired interface

## Force

It is often necessary to measure weight and force on cans during storage and transportation.

TMI-Orion recommends the use of the NanoVACQ Force which can be customized to the specific needs of the application.



### TMI-Orion solutions

- **Data loggers**  
NanoVACQ Force
- **Software**  
Qlever software platform  
+ Authentication-tracking module (FDA 21 CFR Part 11): optional  
**OR**  
Qlever Lite
- **Connectivity**  
Wired interface

## TMI-ORION PORTFOLIO FOR FOOD PROCESSING INDUSTRY

You will find here a choice of dataloggers for food industry processes : temperature, pressure, humidity, air flow, deformation, force. Our range of temperature dataloggers covers **temperatures from -90°C to 140°C**. Beyond +140°C, a thermal shield is necessary.

Sensors are Pt100, Pt1000 or thermocouples for **high temperature data loggers**. The probes have various forms and dimensions. Sensors can be internal to the logger, placed at the end of a rigid probe 10 to 100 mm long, or at the end of a flexible or semi-rigid probe, up to 1 meter long.

Depending on the models, you can choose loggers with **1 to 16 measurement channels**.

### Data loggers

- **PicoVACQ Temperature with platinum sensor:** 1 or 2 temperature sensor.



- **PicoVACQ HT (Humidity and Temperature)**



- **NanoVACQ Temperature platinum sensors, NanoVACQ Temperature FullRadio platinum sensors :** 1, 2 or 3 temperature sensors.



- **NanoVACQ HT (Humidity and Temperature), NanoVACQ HT FullRadio**



- **PicoVACQ Temperature with thermocouple:** 1 temperature sensor.



- **NanoVACQ Temperature thermocouples, NanoVACQ Temperature FullRadio thermocouples:** 1, 2 or 3 temperature sensors.



- **PicoVACQ PT (Pressure and Temperature)**




- **NanoVACQ PT (Pressure and Temperature), NanoVACQ PT FullRadio**






- **NanoVACQ Ad-Td (Air flow and Temperature), NanoVACQ Ad-Td FullRadio**

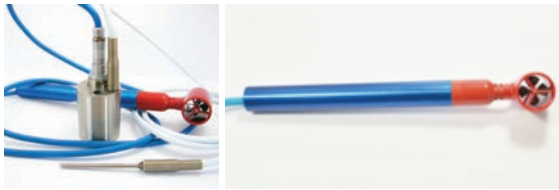

- **NanoVACQ Force**

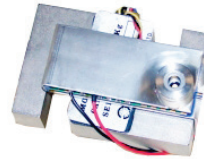

- **Picoμwave:** 1 temperature sensor for use in microwave ovens.




- **VACQ xFlat, VACQ xFlat FullRadio:** 4, 8 or 16 thermocouple channels.




- **MiniVACQ:** 1 temperature sensor.




- **VACQ uFlat:** 3 thermocouple channels.

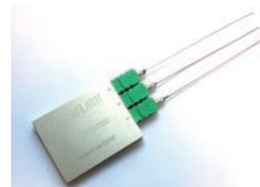

- **PicoVACQ Rotation**

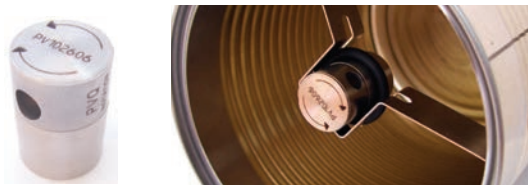

- **NanoVACQ Deformation**

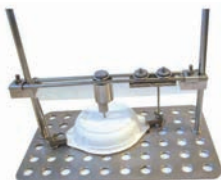

Visit [www.tmi-orion.com](http://www.tmi-orion.com) for information on all TMI-Orion products and list of business partners.

### Additional tips for packaging handling

#### Limited access containers

Thanks to its small size, PicoVACQ easily fits inside bottles through standard bottle-necks or any flexible packaging. It is designed to provide information during filling, sealing and transport.



#### Positioning the loggers inside containers


TMI-Orion has a wide range of positioning kits available to maintain the logger sensor at the cold spot inside the containers.

#### Solutions for packaging industrial processes

- Can lid coating polymerization,
- annealing of metal parts such as can lids,
- cans interior lacquer or varnish polymerization,
- cans exterior serigraphy cooking,
- cans joining strip varnish cooking,
- overpressurization tests in PET bottles, glass, caps, etc
- and many more industrial processes...

### Accessories


The positioning kits help maintain the logger sensor at the cold point inside the process ; some of them act as a mechanical protection for the logger. According to the applications, the logger will be placed inside or outside the container. The following examples are usual devices, but customization can be studied upon request.

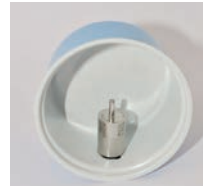

## Software

Qlever is a software solution for the acquisition, analysis and visualization of data measured by TMI-Orion autonomous data loggers.

Qlever is the general platform of our software offering. It operates alone or in combination with one or several industry specific software modules.

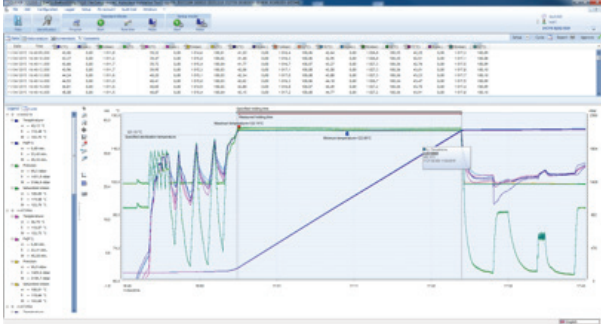

- **Qlever:** Software platform dedicated to the management of one or several TMI-Orion data loggers.  
Set up and programming of TMI-Orion equipment, collection of data, processing (lethality calculations (F0 / A0 / Vp, saturated steam,...), analysis and display of data.
- **Qlever Lite:** Simplified software solution intended for managing a single wired TMI-Orion data logger. Cannot be combined with any of the software modules.
- **Authentication-tracking module – Compliant with FDA 21 CFR Part 11:**  
Dedicated to secure management of user access, with creation of different accounts and access levels (Administrator, approval, operator).  
Complete tracking of processes and data including any addition, deletion or modification operation (Audit Trail).
- **Calibration module:**  
Dedicated to TMI-Orion temperature and humidity loggers calibration process: calibration, adjustment, checking and editing of a report. Available with a library of drivers, to communicate with many calibration equipment: baths, ovens, reference probes. Delivers a calibration and adjustment report. Expert mode, Automatic mode and Manual mode available.

## Connectivity and batteries

- Mono-USB interface (connection cable between loggers and the PC)
- 2.4 GHz radio modem connected to the PC
- User replaceable batteries or battery packs.

## Services

- Calibration and adjustment of sensors: every year
- After-sales services: metrology, repair, assistance, hotline
- Design of custom solutions (products and software)



**TMI-Orion** FOOD PROCESSING



**[www.tmi-orion.com](http://www.tmi-orion.com)**

**Headquarters: TMI-Orion S.A.**  
**Parc de Bellegarde - Bât. A**  
**1, chemin de Borie**  
**34170 Castelnau-le-Lez - France**  
**T.: +33 (0)4 99 52 67 10 – F.: +33 (0)4 99 52 67 19**

**USA : TMI-USA, Inc.**  
**11491 Sunset Hills Road, Suite 310**  
**Reston, VA 20190 - USA**  
**T : +1 703 668 0114 – F : +1 703 668 0118**

**[www.tmi-orion.com](http://www.tmi-orion.com)**

© 2017 TMI-Orion. All rights reserved. VACQ, NanoVACQ, PicoVACQ, MiniVACQ are registered trademarks of TMI-Orion. Qlever and FullRadio are registered trademarks of TMI-USA. Windows is a registered trademark of Microsoft Corporation.

*This document is not contractual. Our products are often updated, please contact our Sales department. Photo credit : ©Fotolia / TMI-Orion*