

AP2

Backplane for 5B modules

Capable connection technology. For two 5B modules.

Carrier board in 5B technology: Up to two measuring amplifiers, converters or any other function modules can be plugged into the analog backplane AP2. The variety of available 5B modules provides for the solution of the most specific measuring tasks - individual and simple.

5B technology. Industrial standard.

The pin assignment of the backplane integrated in the AP2 corresponds to the 5B module standard of Analog Devices and Burr Brown. An additional 0EX pin has been introduced for sensors requiring unipolar supply to be suitable for connection.

Clearly safe.

Most of the 5B modules feature galvanic isolation of the channels from each other and from the data acquisition and control system. This perfectly protects the whole system against high potentials and interferences.

Well supplied.

The AP2 is operated with 5V or 9-40V optionally. The supply voltage is connected via screw-clamp terminals.



Signal connection. Clamp. Ready.

Sensors or other voltage signals can comfortably be connected via 7-pole spring terminal blocks.

Connection to the DAQ system.

The amplifier outputs are available at a 5-pole screw terminal connector. They are connected to the input lines of a data acquisition system. Combining the AP2 with a measuring card or DAQ system from bmcm makes a powerful measurement system.


DIN rail mounting.

The AP2a comes with a DIN rail carrier with bracket to be easily mounted on a standard DIN rail as commonly used in electrical installation.

The big option.

You have the choice.

For all needing more channels: The analog backplane is also available as an 8-channel version AP8.

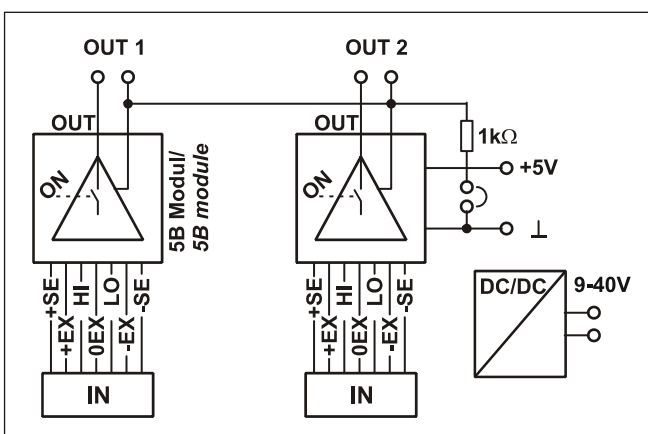

Functional diagram

1 Installation

Mount the AP2 into the DIN rail carrier and click it on the DIN rail. Provide for power supply by applying a 2-pole cable to the power unit. Now the analog output of the AP2 is connected with the DAQ system, the AP2 is equipped with 5B-compatible modules, and the signals cables are attached to the terminal connectors of the AP2 then.



Always turn off the power before changing the modules! Check for correct poling of the power supply!

2 Connections and pin assignments

The available connections and different components of the AP2 board are shown in the following figure of the board (view on top of the board (fitted with components), analog output connector top right).

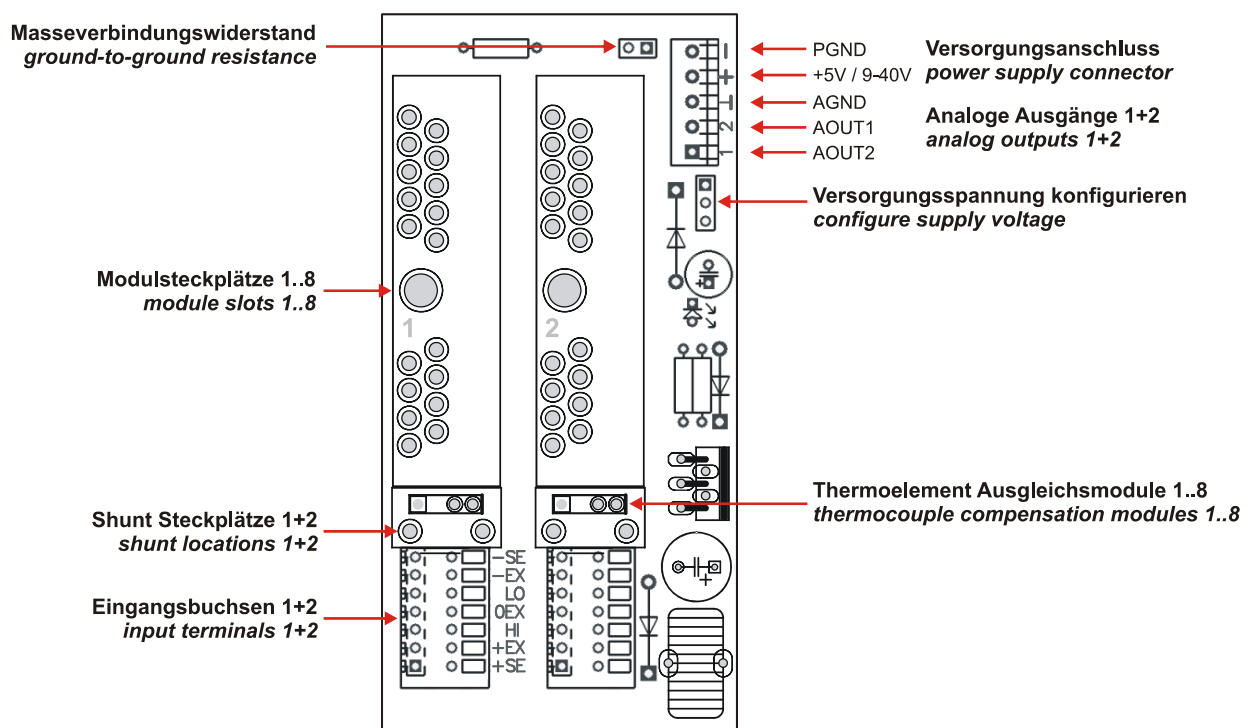



Figure 1

2.1 Power supply +5V or 9-40V

The power supply is applied to the 5-pole screw terminal of the AP2 (see Figure 1).

The range of the supply voltage is selected at the 3-pole jumper on the AP2. If placed across the pad in the middle and the square pad, the backplane must be supplied with +5V. If placed across the pad in the middle and the round pad, a voltage in the range of +9..40V (default setting ex works) can be used.

The power supply is provided with a reversible semi-conductor fuse (multifuse), which is turned off when overloaded. To make the fuse work effectively again, get rid of the overload first before disconnecting the AP2 from the power supply.

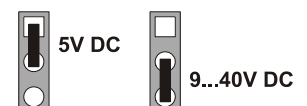


2.2 Ground-to-ground resistance

The ground-to-ground resistance is required when the output ground is not electrically connected with the power supply ground. If the 2-pole jumper (see Figure 1) is closed, the output switches of the modules are switched through. In case of electrically connected systems (e.g. PC), this jumper represents a high-resistance bridge (1kΩ) and may generate a hum loop.

2.3 Analog outputs

The amplifier outputs are available at the 5-pole screw terminal connector (see Figure 1). They are connected to the analog inputs of the data acquisition system.

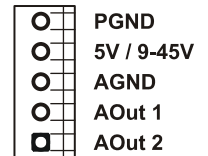

The output cable can be laid with the same signal ground and shield in case of short distances (long distances may lead to cross talk).

2.4 Input terminals

The measuring signals are connected to pins HI and LO of the input terminals (see Figure 1). Depending on the 5B module used, the +EX and -EX pins provide the relevant supply for the sensors. Pins +SE and -SE are sensor lines and are connected according to the relevant application (e.g. for 6-wire technology in strain gage measurement). the shield of the analog input cables can be applied to ground or 0EX depending on the application (always connect at one end of the cable only).




Run the signal ground separately if possible. Always lay input cables separately.

2.5 Module pin assignment

The pin assignment on the right shows the top view of the module backplane (see Figure 1).

The pin assignment corresponds to the 5B modules of Analog Devices®, BURR BROWN® etc. However, an additional 0EX pin has been introduced, which is particularly suitable for ungrounded shielding. This is a specific assignment of BMC Messsysteme GmbH. The 0EX pin is not connected in modules of other manufacturers.

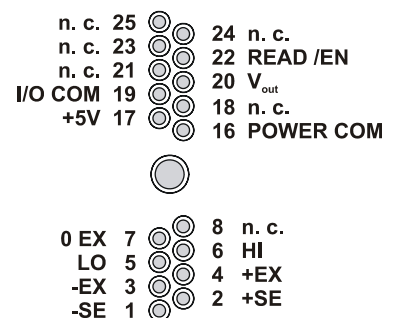

2.6 Current measurement modules


If a current measurement module requires an external shunt, it can be inserted in front of the relevant 5B module.

2.7 Thermocouple connection

Using a thermocouple requires a cold junction compensation. The relevant element is plugged underneath the module slot (see Figure 1). This allows the installation of a cold junction compensation directly at the terminal connection of the thermocouple matching the 5B modules.

3 Connection examples for using the AP2 with 5B amplifiers


The most different 5B amplifiers can be used with the AP2. Please see the relevant data sheets of the 5B modules for further connection examples.

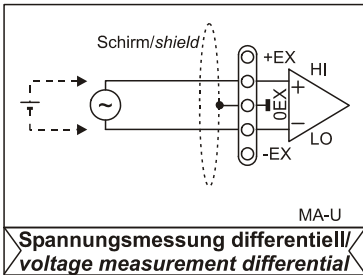

3.1 MA-U: Voltage measurement (DC and AC decoupled)

The input is differential (balanced).

Close jumpers J5 and J7 of the MA-U for AC decoupling to suppress DC components of the signal. AC decoupling can only be used in the $\pm 0.5V$ and $\pm 1V$ measuring range.

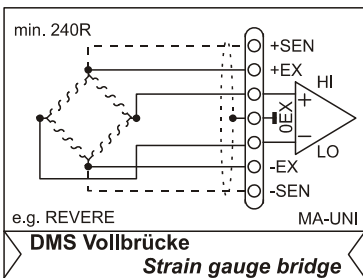

3.2 MA-UNI: Strain gage measurement with DC

Strain gages are resistors operated in bridge circuits. The EX voltage is $\pm 2.5V$ DC. The input amplifier is operated in differential mode. If necessary, the sensor lines compensate for line losses.

In the case of bridge extensions, precise supplementary resistors must be used (0.1%; TC15). If using 100Ω bridges, it is only possible to supply with $+2.5V$, dividing the measuring range in half.

The Jumpers J12, J13 of the MA-UNI must only be closed in 6-wire applications. For some applications, it is better to connect the screen to earth and not to the internal ground (0EX).

4 Important notes for using the AP2

- The AP2 is only suitable for extra-low voltages – please observe the relevant regulations!
- An electrically isolated power unit (with CE) must be used for power supply.
- All accessible pins are electrostatic sensitive devices. Provide for an earthed conductive work place when installing.
- Only use non-solvent detergents for cleaning.
- The product is designed to be maintenance-free. For calibration, the backplane must be returned to bmcm.
- Open inputs should be closed.
- The board must not be used for safety-relevant tasks. With the use of the product, the customer becomes manufacturer by law and is therefore fully responsible for the proper installation and use of the product. In the case of improper use and/or unauthorized interference, our warranty ceases and any warranty claim is excluded.



Do not dispose of the product in the domestic waste or at any waste collection places. It has to be either duly disposed according to the WEEE directive or can be returned to bmcm at your own expense.

5 Technical data (typical at 20°C, after 5min., 9-40V supply)

• Electrical data

Power supply:	9..40V (max. 1A DC, default setting ex works) or +5V DC $\pm 5\%$ (max. 1.5A DC)
Max. current to be drawn for the modules:	max. 1A (\approx total of current of all individual modules)
Electrical isolation:	depending on the module in use
Max. permissible potentials:	60V DC acc. to VDE , max. 1kV ESD on open lines

• General data

Temperature ranges:	operating temp. 0..70°C, storage temp. -25..70°C
Relative humidity:	0-90% (not condensing)
CE standards:	EN61000-6-1, EN61000-6-3, EN61010-1; for decl. of conformity (PDF) visit www.bmcm.de
ElektroG // ear registration:	RoHS and WEEE compliant // WEEE Reg.-No. DE75472248
Dimensions (L x W x H):	backplane: 18cm x 10cm x 2cm; with DIN rail carrier and bracket: 18.3cm x 10.5cm x 4.3cm
Available accessories (optional):	power supply ZU-PW10W, waterproof housing ZU-PBOX-PG, ZU-PBOX-LAN
Warranty:	2 years from date of purchase at bmcm, claims for damages resulting from improper use excluded

Manufacturer: BMC Messsysteme GmbH. Subject to change due to technical improvements. Errors and printing errors excepted. Rev. 1.2 12/23/2010